

Emergency Lighting Bullet



When the bullet is removed, the emergency lighting will start only if the generator stops or fails.

This bullet must be removed when the club house is open and left in the generator door while on and only replaced when closing the club.

Inserting the bullet will disable the emergency lights. If this is not inserted when closing the club, the batteries will drain, and the alarm will fail.